


Fidek[®]

Sequence power switch

FSP-12EX MKII

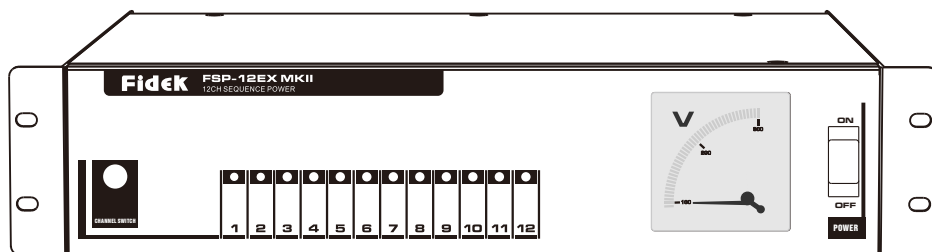

USER'S MANUAL


CONTENTS


FEATURES.....	1
SAFETY INSTRUCTIONS.....	2-3
FUNCTION DESCRIPTION	4
FRONT PANEL.....	4
REAR PANEL.....	4
CONNECTION.....	5
OPERATION.....	6
SPECIFICATIONS	6


FEATURES

- ◆ Turn on or off the power of 12 channel step by step in sequence.
- ◆ Use FCQA-760/8631/7831/9631 to control.
- ◆ The capacity of socket is 220VAC,45A,9900W.

SAFETY INSTRUCTIONS

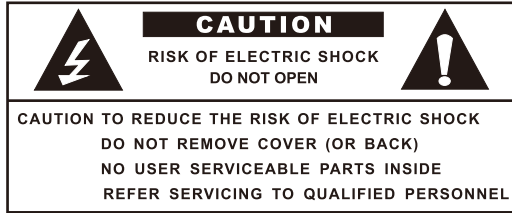

 The lightning flash with arrowhead symbol inside an equilateral triangle is intended to alert the user to the presence of uninsulated "hazardous voltage" within the product's enclosure, which may be of sufficient magnitude to induce a risk of electric shock to persons.


 The exclamation mark inside an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.

WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.



1. Caution: To reduce the risk of electric shock, do not remove cover (or back). No user-serviceable parts inside. Refer servicing to qualified personnel.

2. Do not install the equipment in a place exposed to direct sunlight.

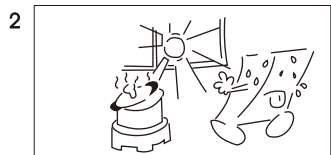

SAFETY INSTRUCTIONS


3




3、 Do not install the equipment in a dusty, damp or poorly ventilated place.

4、 To prevent damage to the equipment, please unplug from the power outlet if not in use.

4

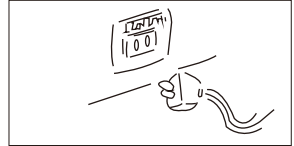

5

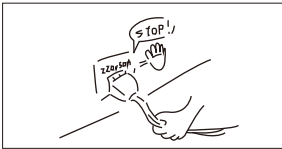

5、 To unplug the equipment, always handle the power cord using the plug. Do not pull out the plug by tugging the cord.

6、 Place the equipment on a stable surface and avoid placing other objects on top.

6




7



7、 Cleaning care: Use a soft, dry cloth for cleaning. For stubborn dirt, soak the cloth in a weak detergent solution; wring well and wipe to remove the dirt. Do not use volatile agents such as benzene or paint thinner, as they may damage the surface finish of the equipment.


8、 Please do not block the cooling vents to avoid overheating.

8

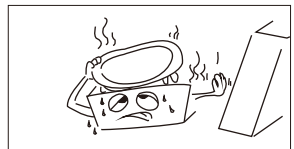

FUNCTION DESCRIPTION

1. FRONT PANEL

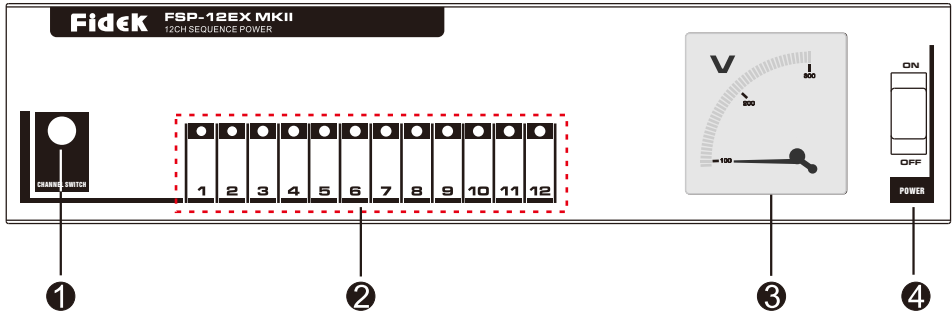


1. Channel switch

3. Voltmeter

2. Indicator LED

4. Power switch

2. REAR PANEL

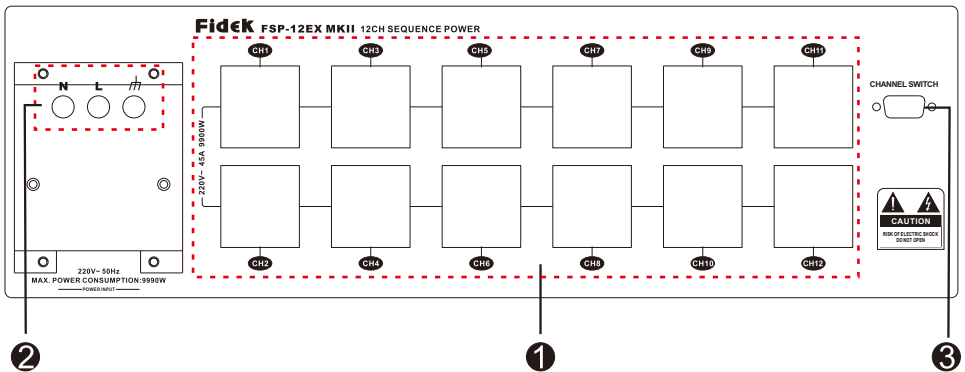


1. Channel output socket

3. Control port of FCQA-760/8631/9631/7831


2. Power Input

CONNECTION

First direction for use: Turn on or off the audio system step by step.

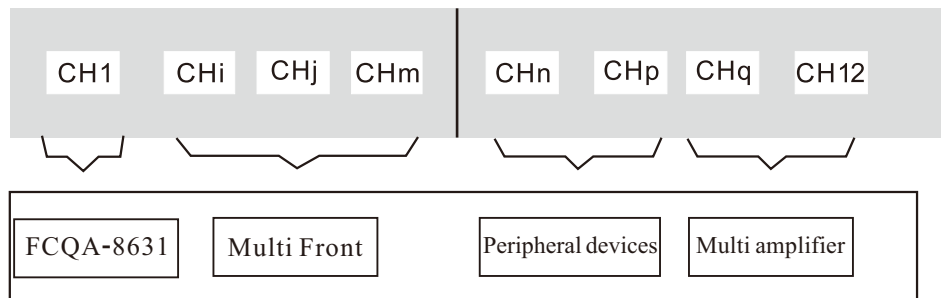

Second direction for use: Turn on multi amplifiers in different time to avoid the power grid impact.

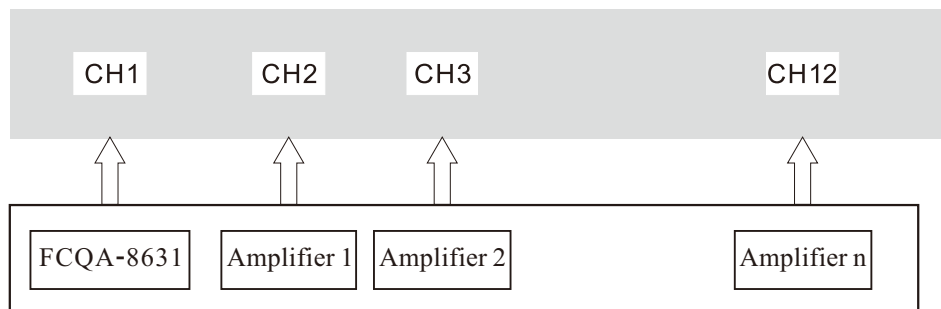

OPERATION

1. Please confirm the connection is correct or not;

Caution: the power cable should be connected to the automatic switch of the main power source.

2. CH1 channel not be controlled by the channel switch, it use for the power of FCQA-760/8631/9631/7831.

3. The channel switch of FSP-12EX MKII should contact to the power port of FCQA-760/8631/9631/7831

4. Before FCQA-760/8631/9631/7831 contacting with FSP-12EX MKII, the power switch of FCQA-760/8631/9631/7831 should be "ON".

SPECIFICATIONS

Output of the power switch	total capacity 220V,10A(MAX)
TIME	1.5S
Power dissipation	20W(Consumption)
Unit Dimensions(WxDxH)	483x292x570mm
Net Weight	7.2Kg

Fidek®